


Push release valve several times. Red valve cap must be even.

1

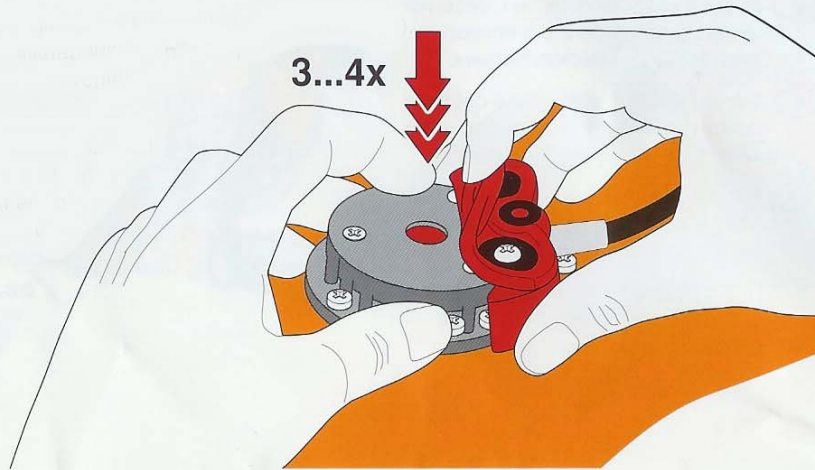

**Directions for use**  
Please keep the directions for use

ABS Peter Aschauer GmbH,  
An der Dornwiese 3,  
82166 Gräfelfing, Germany

## Rocky Mountain Xtreme

Box 653 Rosedale, Alberta, Canada T0J 2V0  
Ph: (403) 823-9977 Fx: (403) 823-4090  
<http://www.rockymountainxtreme.com>  
email: [rmx7@telus.net](mailto:rmx7@telus.net)




Check cartridge volume. You find the fill weight (without safety cap) at cartridge bottom.

2





Screw cartridge in all the way.

3

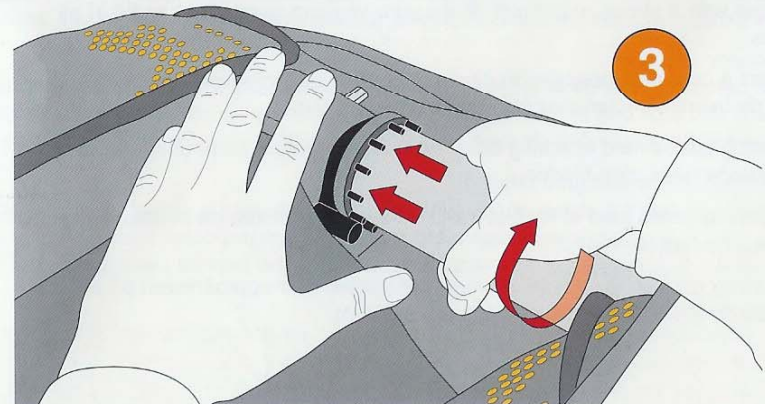


Check trigger handle. The pin must be firmly attached to the handle, no red marking should be visible. Do not use any damaged handles – danger of exploding (bursting).

4

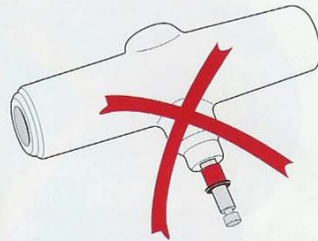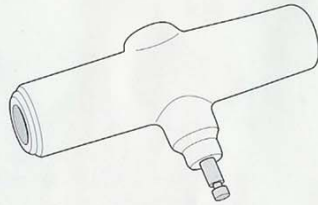


Attach trigger handle. Push handle straight up until it locks automatically into the bayonet catch. Only then is the handle attached properly.

5

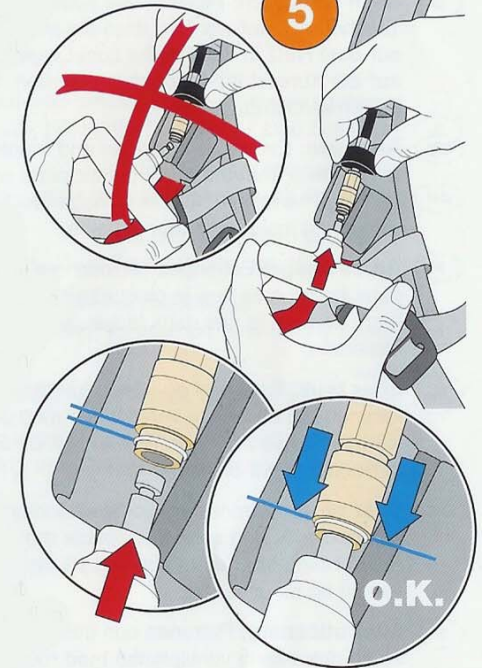


To detach the handle push the bayonet catch up. Handle will fall out without any pulling.

6

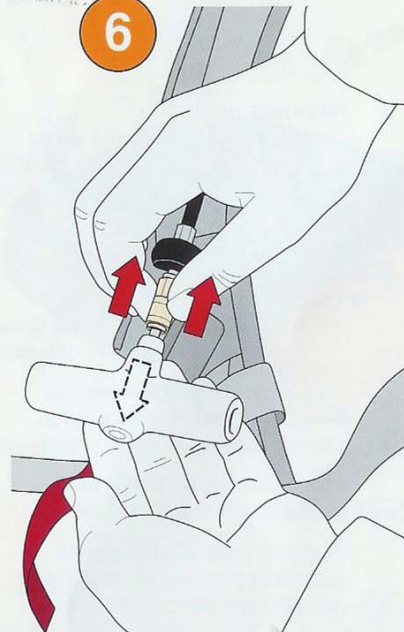

7

Close all black and red velcros.

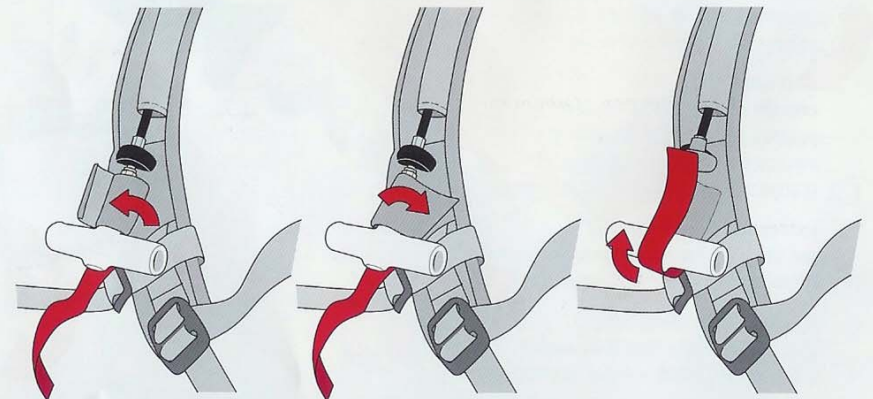

8

Close chest and seat harness buckles firmly. Use safety harness when loosening seat harness.



9

Before skiing loosen the red velcro about 2 cm for an easier trigger.






10



Trigger with a strong, rapid pull. Make sure you can reach the handle at all times.



**After use:** Exchange cartridge and trigger handle. The airbags have to be folded back into the pockets, that the black plastic plate will lie with the red cover plate freely on top of the netting. Therefore the whole airbag must be folded behind the plastic plate. Close it with the velcro first inside and then outside.

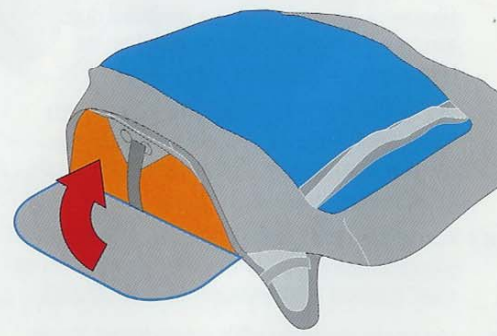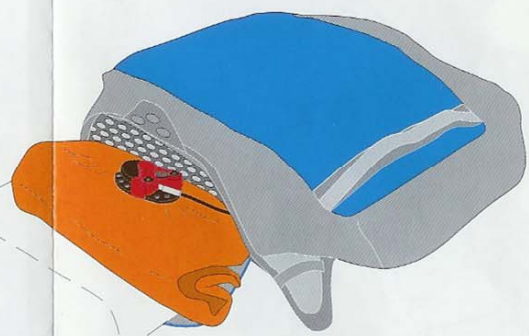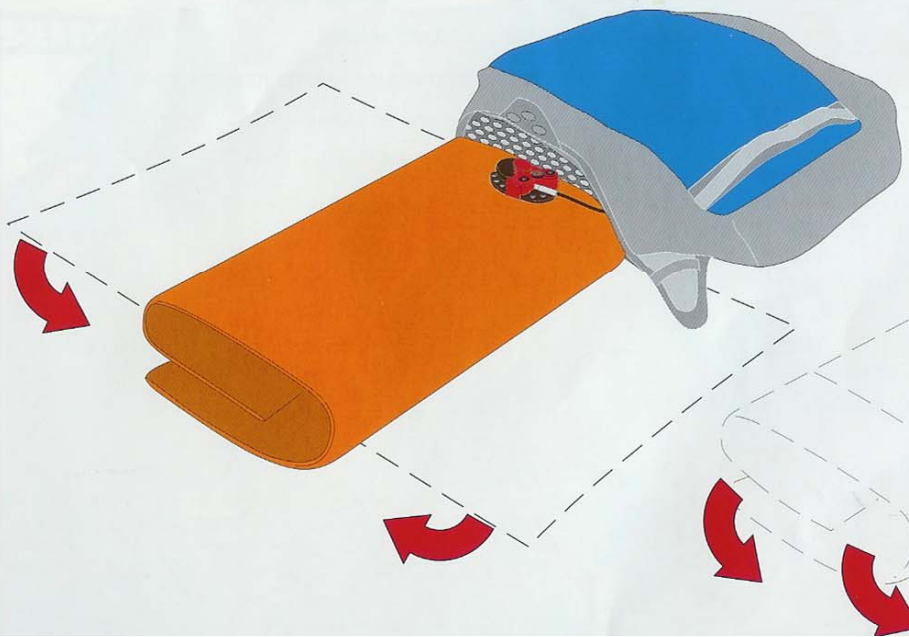

11

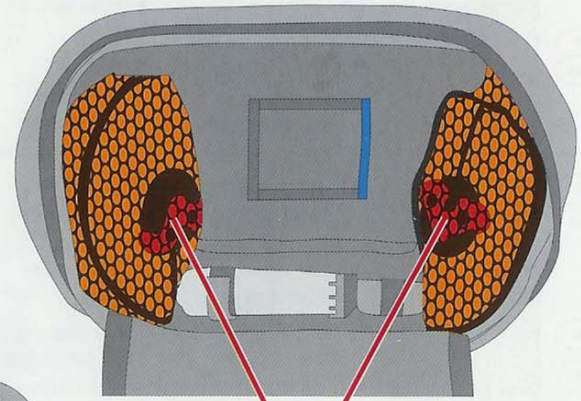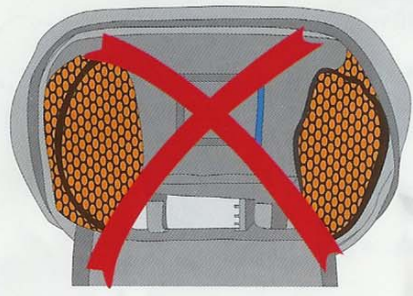

O.K.